


TIGER BARN SHED

GENERAL ASSEMBLY INSTRUCTIONS

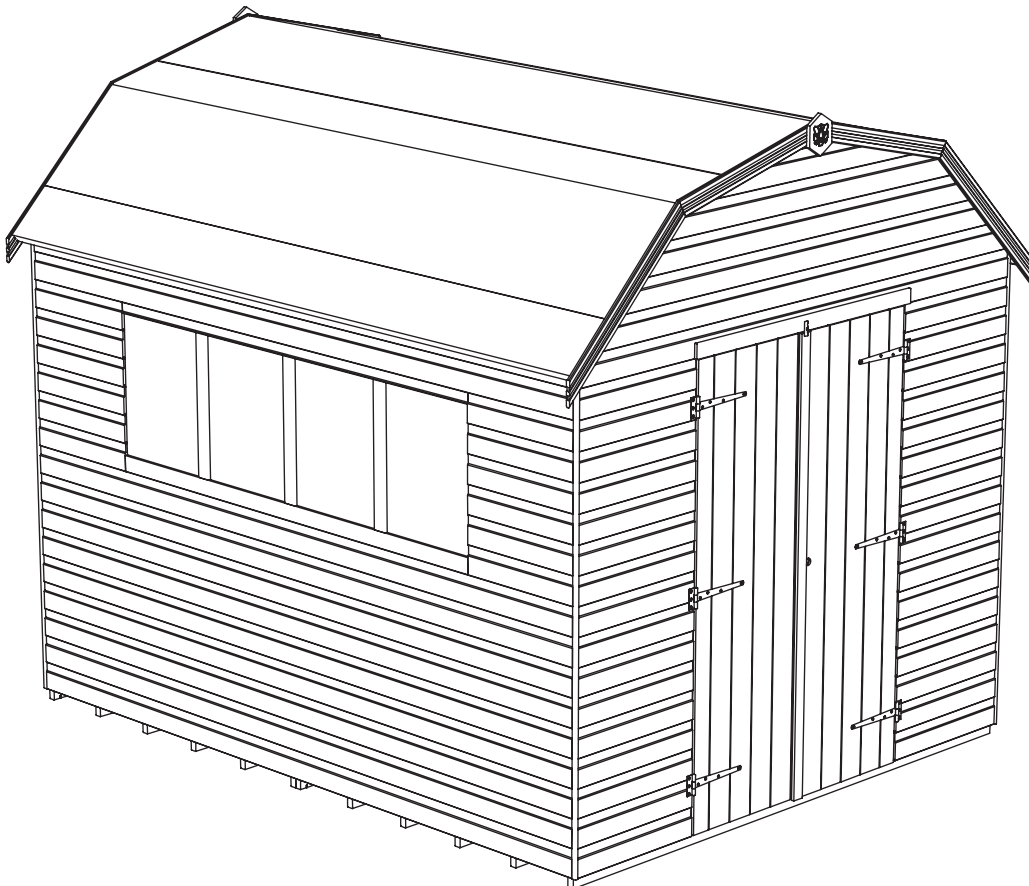

tiger[®]


BEFORE YOU GET STARTED

PLEASE READ INSTRUCTIONS CAREFULLY

- Check the pack and make sure you have all the parts listed.
- When you are ready to start, make sure you have the right tools at hand (not supplied).
- Ensure there is plenty of space and a clean dry area for assembly.

TIMBER

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wooden panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be mitigated. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

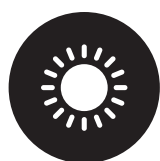

SUMMER
CONTRACTION



WINTER
EXPANSION



WOOD WARPING
MAY OCCUR

To validate your guarantee and ensure longevity of the product, it is **ESSENTIAL** that your building is treated with an appropriate high-quality oil or solvent based preservative **AFTER** assembly, both internally and externally, and annually thereafter. All glazing units must be sealed (internally and externally) with silicone or other watertight sealant.

BUILDING A BASE

Care must be taken to ensure the product is placed on a suitable base. When thinking about where the building and base is going to be constructed, ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is firm and level and is built on firm ground, to prevent distortion.

The constructed base must be at least the size of product as referenced in supplied construct diagram. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

TYPES OF BASE

- Durable plastic grid*.
- Concrete 75mm laid on top of 75mm hard-core.
- Slabs laid on 50mm of sharp sand.
- Timber Base - Self constructed/Buy pre-made.



PLASTIC BASE



CONCRETE BASE



SLAB BASE



TIMBER BASE



BROKEN SLABS



BARE SOIL



LOOSE GRAVEL

**We recommend a Fastfit EcoBase for your building. It is durable, lightweight, flexible and easy to put in place. Please see tigersheds.com for details.*

CAUTION:

All buildings should be erected by two competent adults.



CAUTION:

It is advisable to wear gloves during building installation.



The mark of
responsible forestry

FSC® C125286



MADE IN THE UK SINCE 1913.

We have been making our high quality, great value garden buildings here in Britain for decades.



SCAN CODE!

**TO VIEW GENERAL ASSEMBLY GUIDE
FOR BARN ROOF SHED/SUMMERHOUSE**

***TigerSkin® Water Based Treatment:**

The unique formula of our **TigerSkin®** pre-treatment provides a reassuring layer of protection for your shed or summer house. Each panel is carefully dipped and dried to provide maximum coverage and ensure that your building will have protection from the moment it arrives and is assembled. A water repellent formula which is harmless to plants, not only does it help to shield the timber, it also gives it a warm tone that looks great on your property. Once erected, your building should be treated annually, both internally and externally with an appropriate high-quality oil or solvent based preservative.

Whilst all products manufactured are made to the highest standards of safety, we cannot accept responsibility for your safety whilst erecting or using this product.

BEFORE YOU GET STARTED - PRE ASSEMBLY

TOOLS REQUIRED:

We recommend using the following tools (not supplied):



HAMMER



RUBBER Mallet



LADDER



TAPE MEASURE



SHARP KNIFE



SPIRIT LEVEL



SCREWDRIVER +



WOOD SAW



SPANNER

FIXING KIT GUIDES:

FX02 - NAIL KITS SMALL

For Shed Products Up To 6ft Sides:



Clout Nails (13mm Galvanised - QTY 200)



Panel Pins (25mm - QTY 100)



Nail (40mm Galvanised - QTY 50)



Nail (65mm Bright - QTY 30)



Coach Bolts (80mm - QTY 8)

FX03 - NAIL KITS MEDIUM

For Shed Products With 7ft to 9ft Sides:



Clout Nails (13mm Galvanised - QTY 230)



Panel Pins (25mm - QTY 140)



Nail (40mm Galvanised - QTY 50)



Nail (65mm Bright - QTY 40)



Coach Bolts (80mm - QTY 8)

FX04 - NAIL KITS LARGE

For Shed Products With 10ft to 13ft Sides:



Clout Nails (13mm Galvanised - QTY 300)



Panel Pins (25mm - QTY 140)



Nail (40mm Galvanised - QTY 85)



Nail (65mm Bright - QTY 60)



Coach Bolts (80mm - QTY 8)

FX05 - NAIL KITS EXTRA LARGE

For Shed Products With 14ft to 20ft Sides:



Clout Nails (13mm Galvanised - QTY 450)



Panel Pins (25mm - QTY 200)



Nail (40mm Galvanised - QTY 85)



Nail (65mm Bright - QTY 100)




Coach Bolts (80mm - QTY 8)

REMOVE TRANSPORT BLOCKS

- Make sure transport blocks have been removed from side panels before assembly. *(Detail 1)*

NOTE: HAMMER OFF SIDEWAYS. DO NOT PRISE OFF

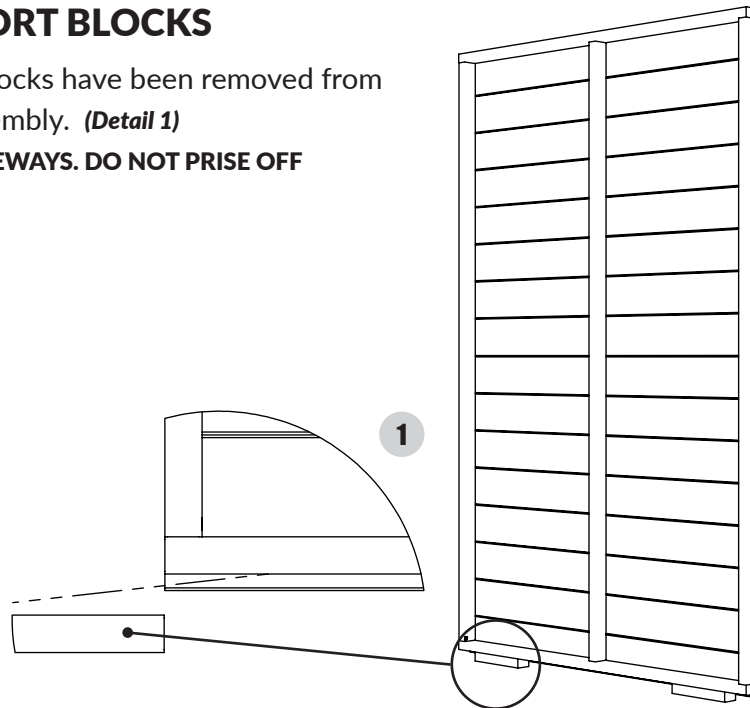

BUILDING PACK CONTENTS:

For full details of what should be included please see the itemised packing list that is supplied with the delivery. They are also available on request in pdf form from our helpful Customer Support team – please call:

0113 205 4189 or use the “Items Delivered Query” form at **[tigersheds.com/contact](https://www.tigersheds.com/contact)**.

- Assembly is straightforward if you follow these step-by-step instructions.
- We recommend getting everything aligned properly before screwing together and that **screw holes should be pre-drilled to avoid splitting the timber.** *(Do not come pre-drilled).*

IMPORTANT


- Before assembly, please make sure you have a suitable base ready to erect your building on.
- Your base **MUST** be firm and level to ensure that the building is assembled properly and is square.
- **DO NOT** start your build until you have checked that all the parts of your building are present, correct and in a suitable condition.
- Panels may have become twisted during loading/unloading and/or transportation. Please check that all framing and cladding are square before beginning assembly.
- Make sure all transport blocks have been removed from panels.
- If you are organising a third party to install your building, it is best practice not to schedule this immediately on receipt of your order, to give you time to check your delivery

TIGER BARN SHED - GENERAL ASSEMBLY INSTRUCTIONS

Step 1:

LAYING THE FLOOR

- **SINGLE FLOOR** - Lay floor down in the desired position. *(Detail A1)*
- **MULTI FLOOR** (excluding 10x8 & 12x8) - Lay floors down in the desired position and butt together. *(Detail A2)*
Join using 4x N65 evenly spaced through floor bearers at an angle. *(Detail A3)*
- **MULTI FLOOR** - 10x8 & 12x8 models. The bearers may run in the opposite direction.
Butt together as shown. *(Detail A4)*
- Join using 4x N65 evenly spaced through floor bearers at an angle. *(Detail A5)*

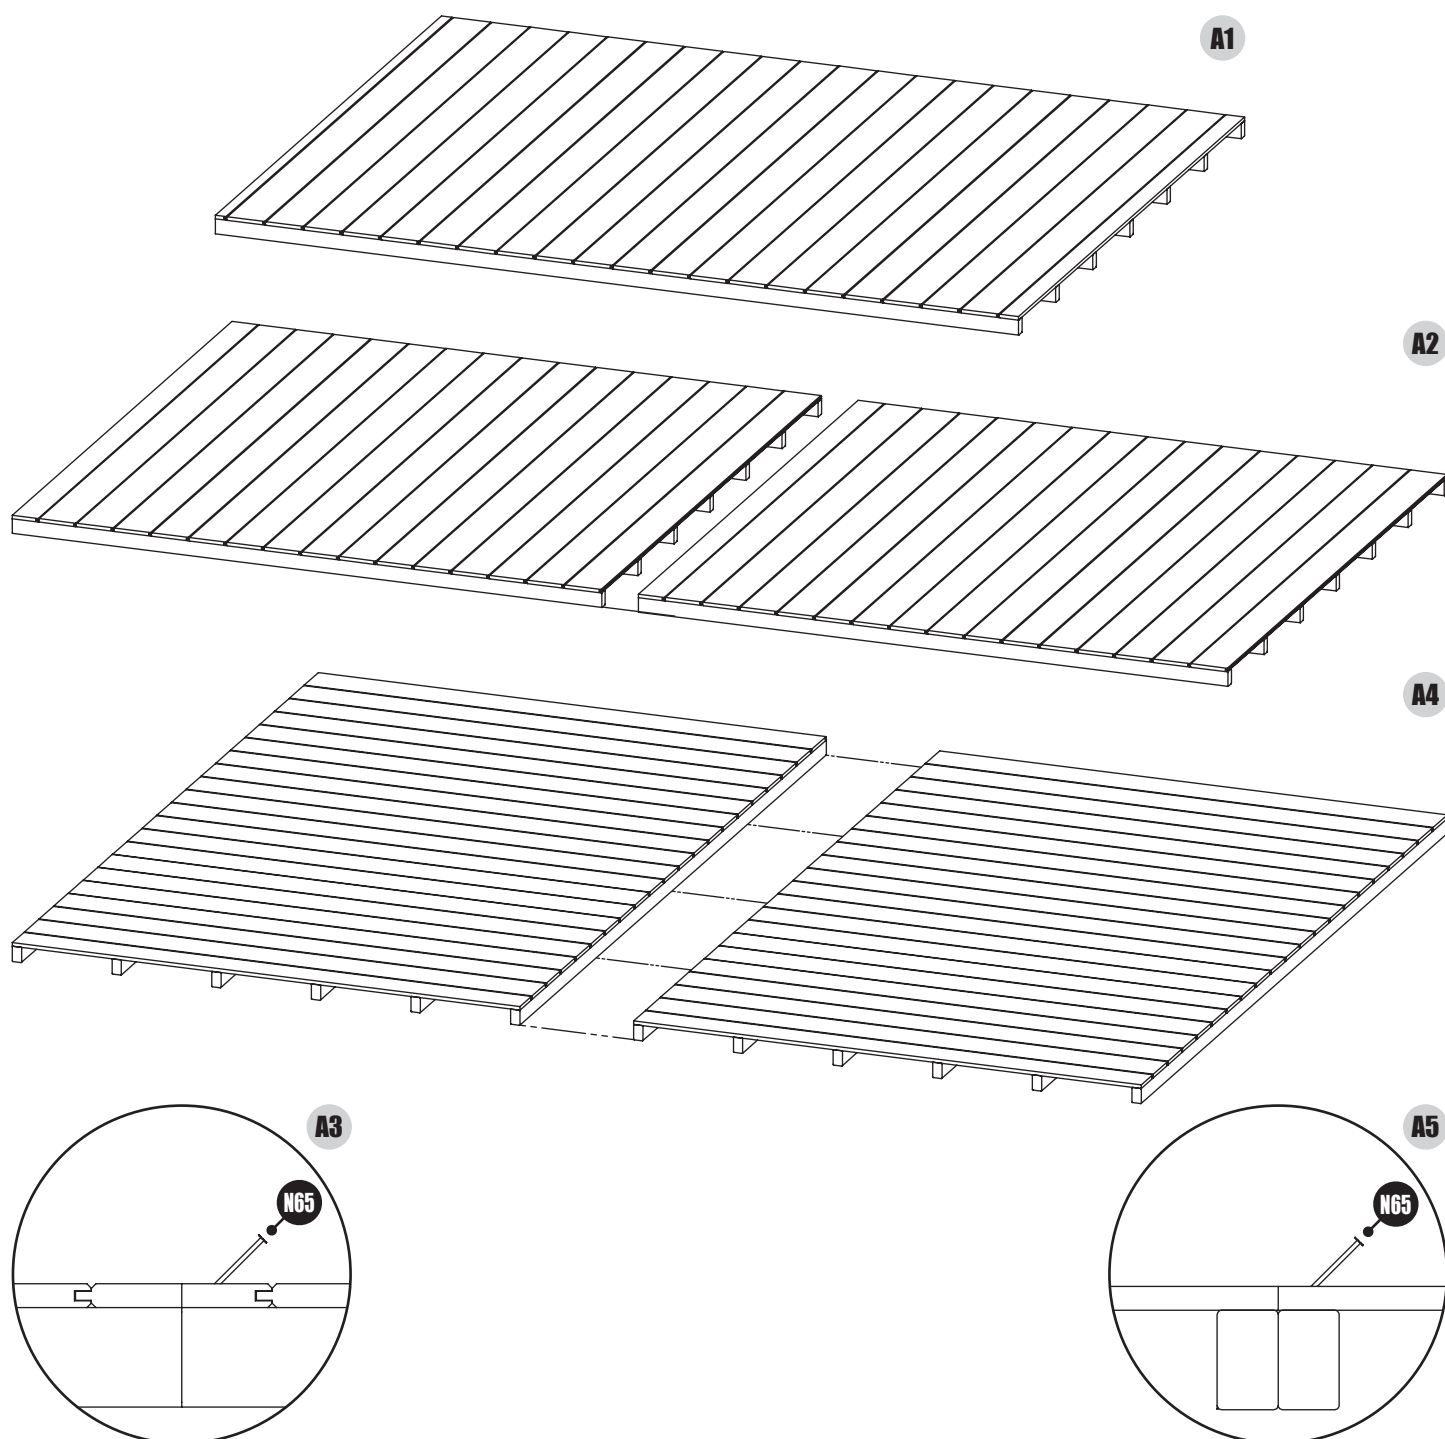

Step 2:




INSTALLING SIDE AND GABLE PANELS

- Position one end gable and side panel as shown. **(Detail B1)**

NOTE: CHECK THAT ALL PANELS ARE AT RIGHT ANGLES TO EACH OTHER AND THE FLOOR.




NOTE: CHECK ALL TRANSPORT BLOCKS HAVE BEEN REMOVED BEFORE FITTING PANELS.

- Secure together with 5x N40 evenly spaced. **(Detail B2)**
- Repeat process for remaining gable and side panel.

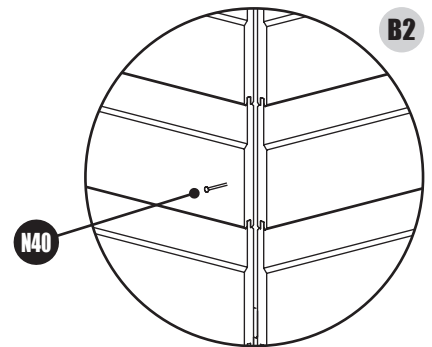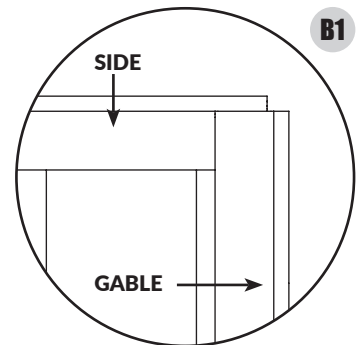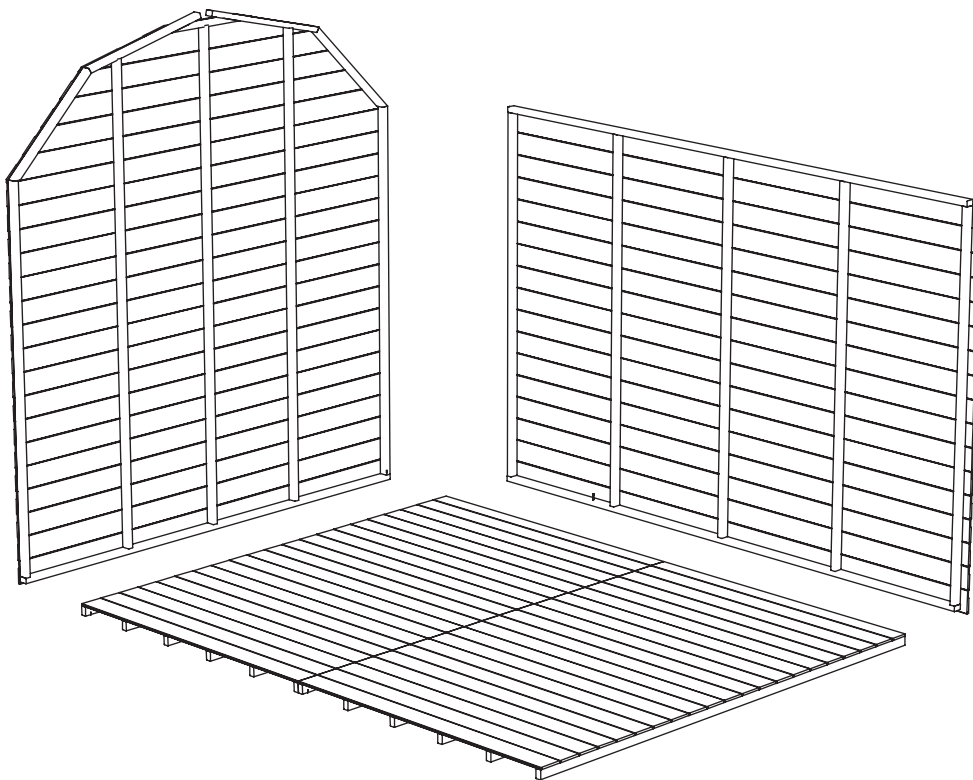

- For side panels made of 2 or more sections, secure together using 3x N65 evenly spaced through internal framework. **(Detail B3 & B4)**

DO NOT FIX TO FLOOR.

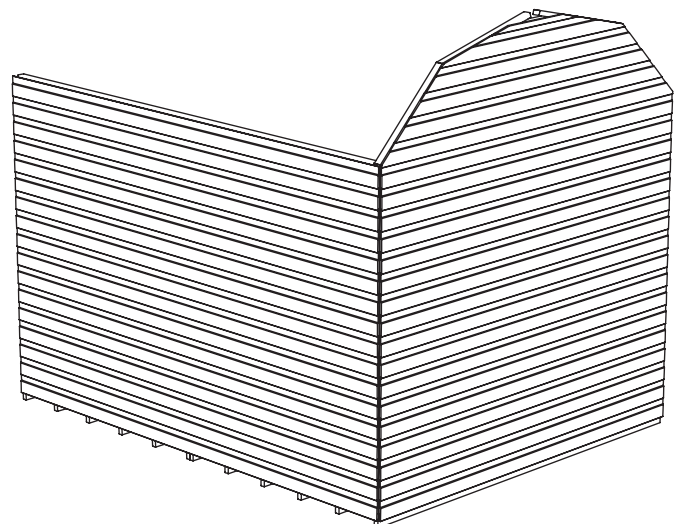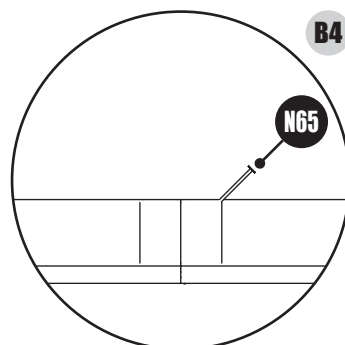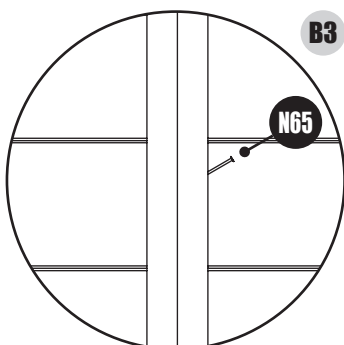

TIGER BARN SHED - GENERAL ASSEMBLY INSTRUCTIONS

Step 3:



SECURING SIDE AND GABLE PANELS

- Locate pre-drilled holes in gable panels. **(Detail C1)**

NOTE: THESE MAY HAVE COVERED OVER DURING PANEL COATING PROCESS. THEY MAY RESEMBLE NAIL HEADS.

- Use 4x CB80 per gable, through the pre-drilled holes in each gable, from the outside. **(Detail C2)**

NOTE: DO NOT FULLY TIGHTEN.

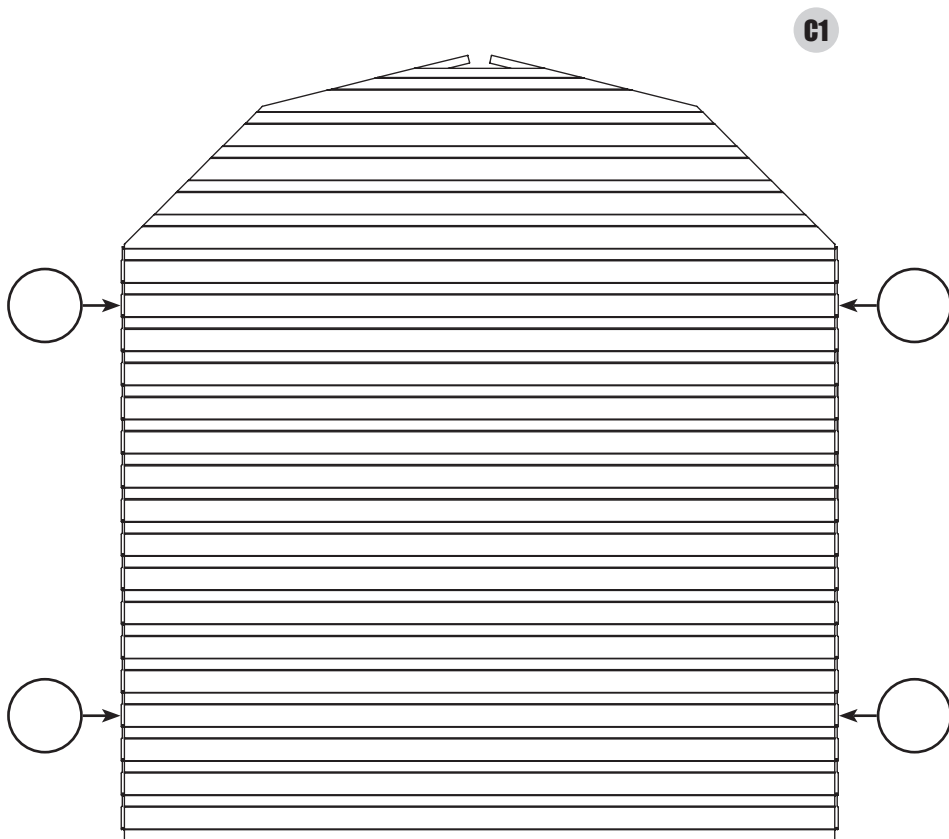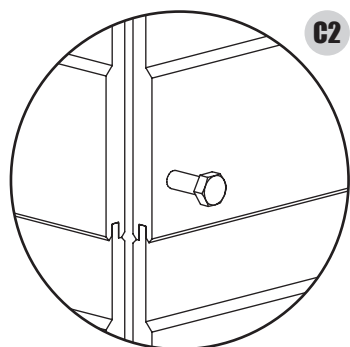


- Check panels are square by measuring between points shown.

(Detail C3)

If measurements are equal, your panels are square. If not, manually adjust to suit.

NOTE: DO NOT TRIM.



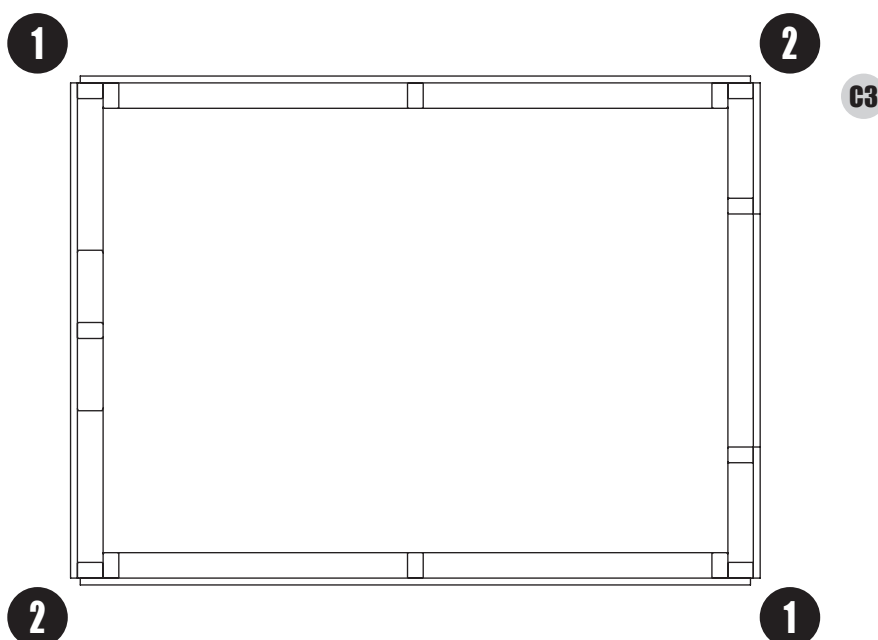


- Secure panels to the floor using 2x N65 per panel. Ensure the N65 are driven through the panels and into the floor bearers. *(Detail C4)*

NOTE: PANELS HAVE BEEN REMOVED FOR CLARITY.

- Tighten 8x CB80. *(Detail C5)*

NOTE: CHECK THAT ALL PANELS ARE AT RIGHT ANGLES TO EACH OTHER AND THE FLOOR.

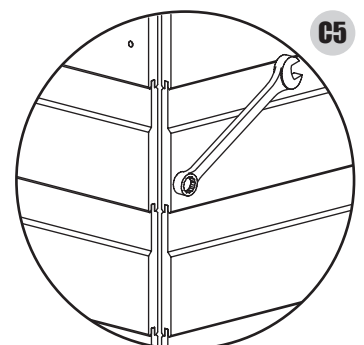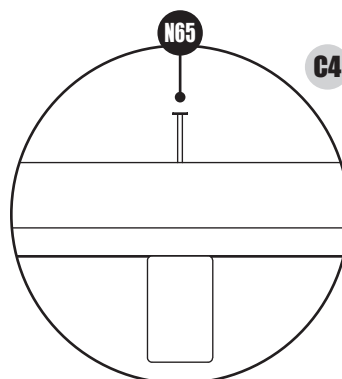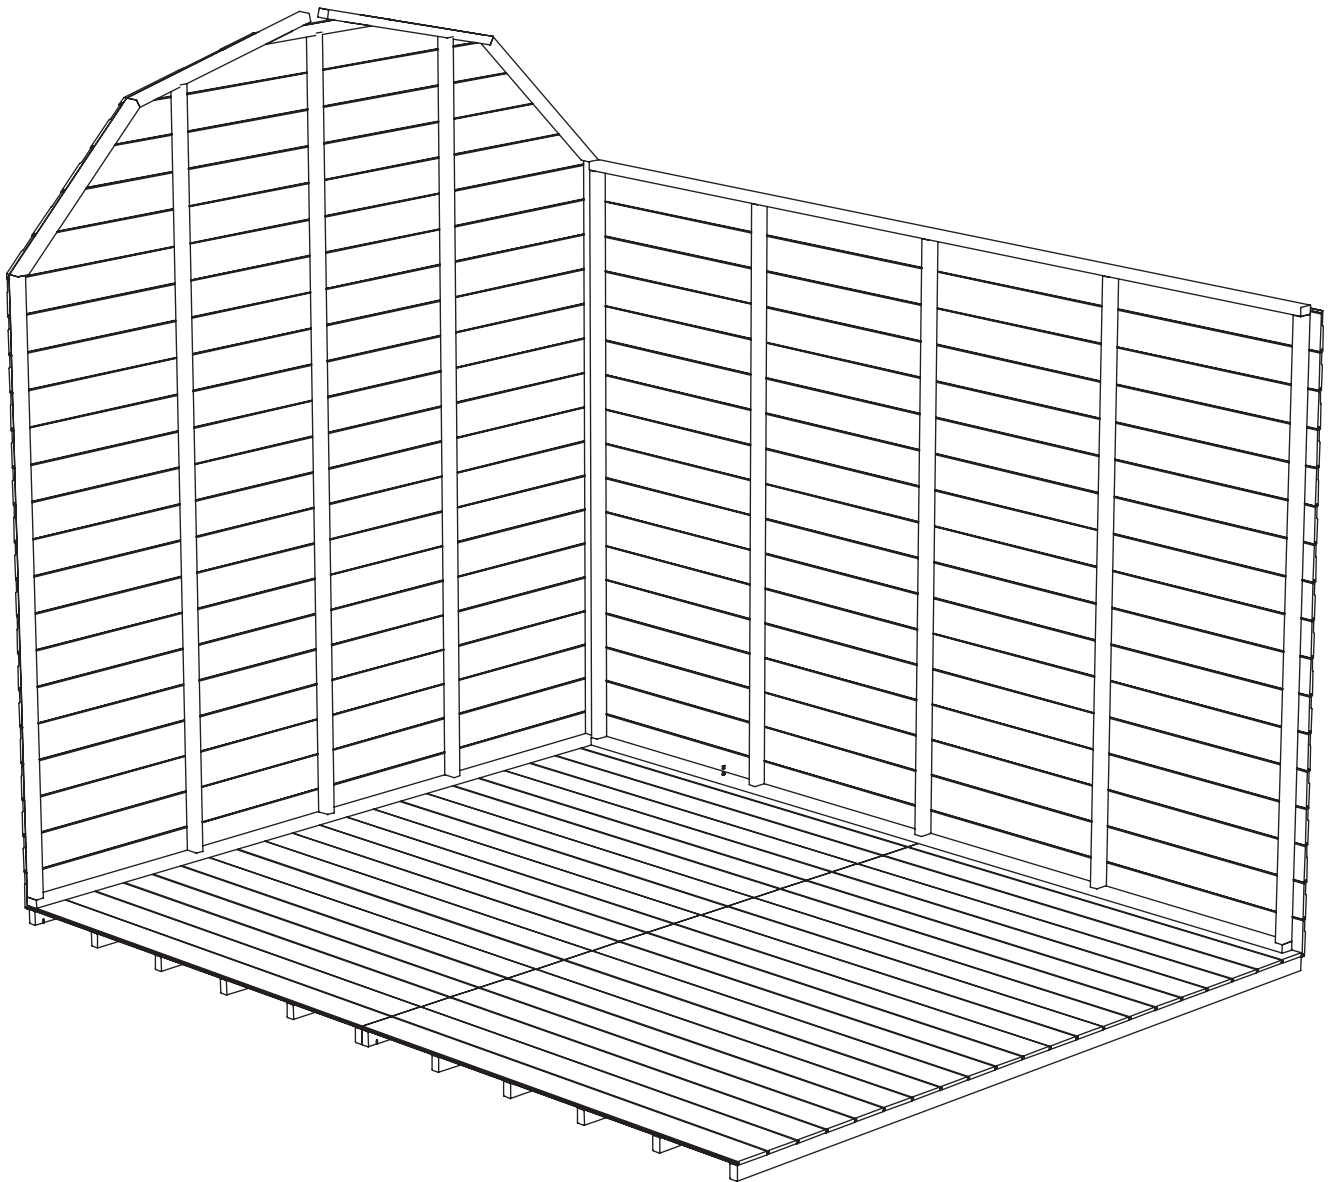

TOP TIP

Use the line of nails securing the floorboards to the bearers as a guide to make sure you correctly secure panels to the floor.





TIGER BARN SHED - GENERAL ASSEMBLY INSTRUCTIONS

Step 4:

INSTALLING ROOF TRUSSES *(Certain Sizes Only)*

- Before fitting roof panels fit barn truss, if supplied. Products with sides 10ft - 19ft are supplied with x1 truss (inc. clips) for centre of building. 20ft models are supplied with 3x trusses (inc. clips) to be equally spaced.
- Carefully remove metal “Z” clips that are attached to the rafter of the roof truss. **(Detail D1)**
- Reattach to the ends of the truss arms using 2x N40. **(Detail D2)**
- Place truss in position and secure through the “Z” clips into upright framing in the panels using 2x N65 per clip. **(Detail D3)**
- Repeat for all other clips.

NOTE: CHECK THAT ALL PANELS ARE AT RIGHT ANGLES TO EACH OTHER AND THE TRUSS.

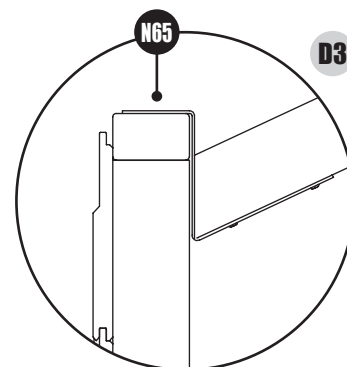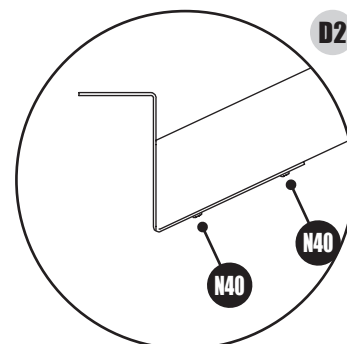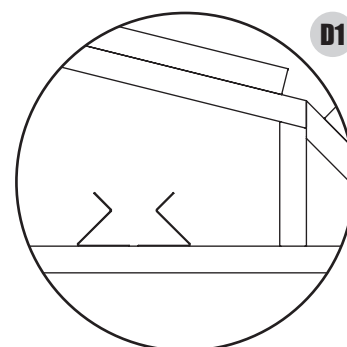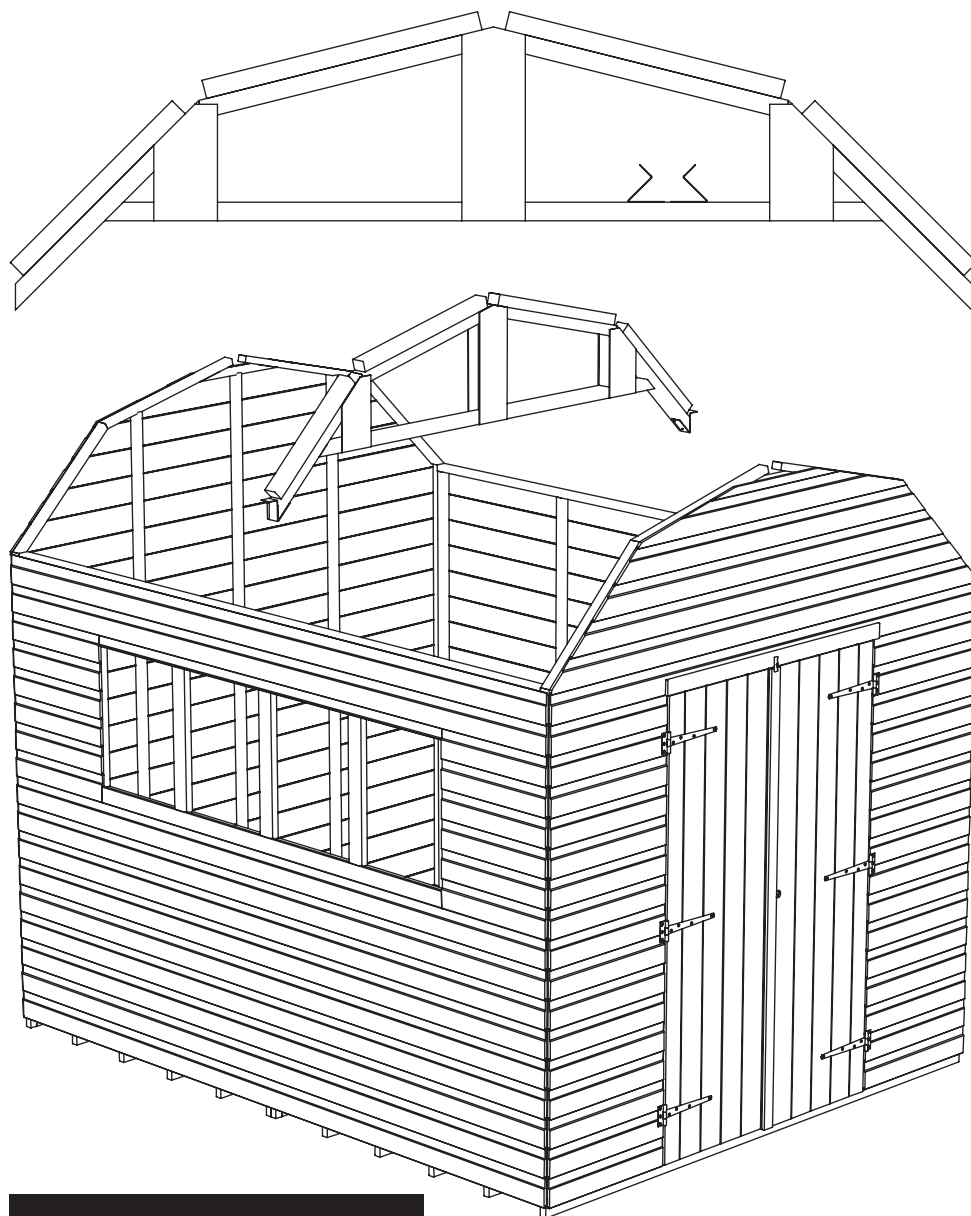




TOP TIP

Have someone hold the truss while you fix to the panels. This will avoid twisting and tipping.

Step 5a:

ROOF INSTALLATION

- Attach roof panels as shown. Use diagram provided to show layout of panels. For roofs that come in 4 sections. **(Detail E1)**
- For roofs that come in 8 sections. **(Detail E2)**
- The metal clips should help support the roof panels on the gable panel rafters.

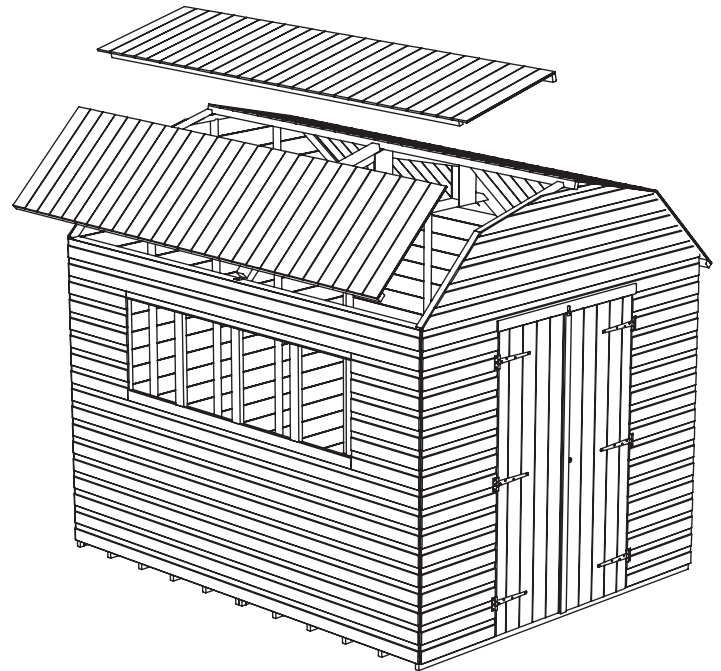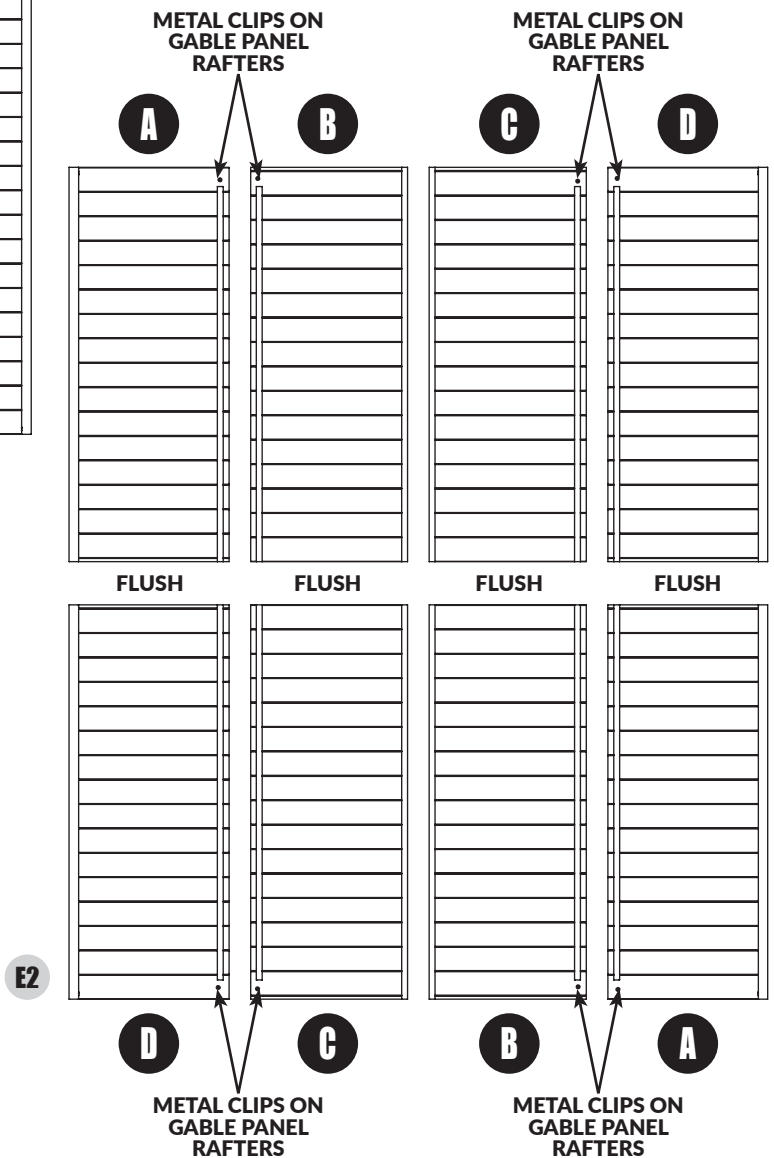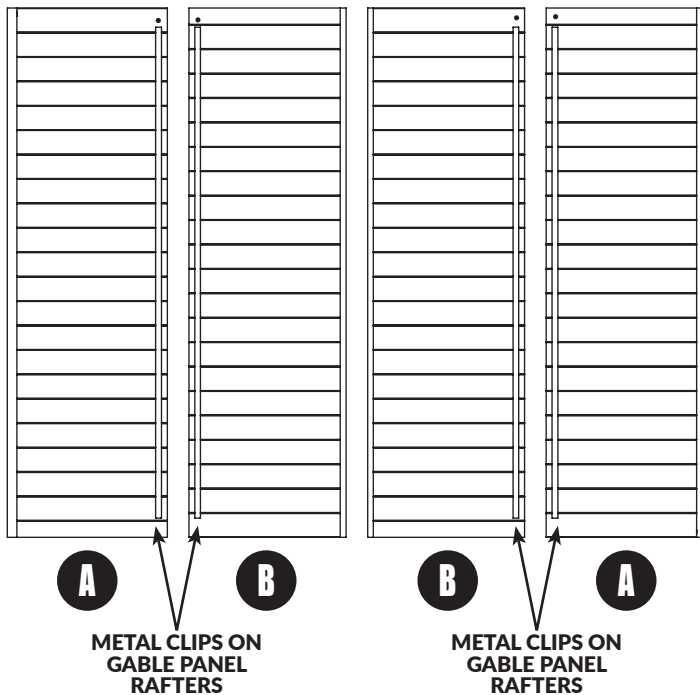
E1


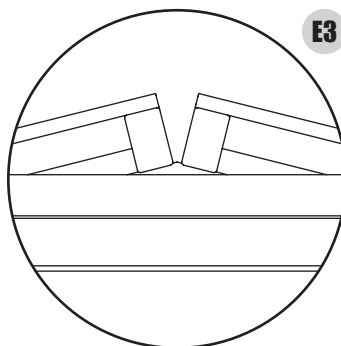
Step 5b:

ROOF INSTALLATION


- Position the roof panels so they sit on top of gable ends and side wall panels (and truss if supplied). **(Detail E3)**
NOTE: FOR ROOFS THAT COME IN 8 SECTIONS, LIFT THE ROOF PANELS INTO PLACE THEN BUTT TOGETHER AS SHOWN.
- Secure roof panels together at apex using 6x N65 per roof panel through purlins. **(Detail E4)**
- Secure roof panels to the gables using 2x N40 through the angled framing. **(Detail E5)**
- Secure roof panels to the side panels using at least 5x N65 through upright framing per panel. **(Detail E5)**
- Secure roof panels to the truss using 2x N40 through the framing. **(Detail E5)**

TOP TIP


You may need someone to hold roof panels together while you secure roof panels at the joins.



E3

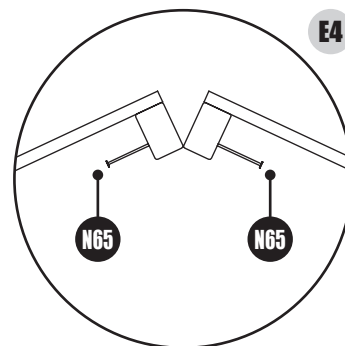


E4

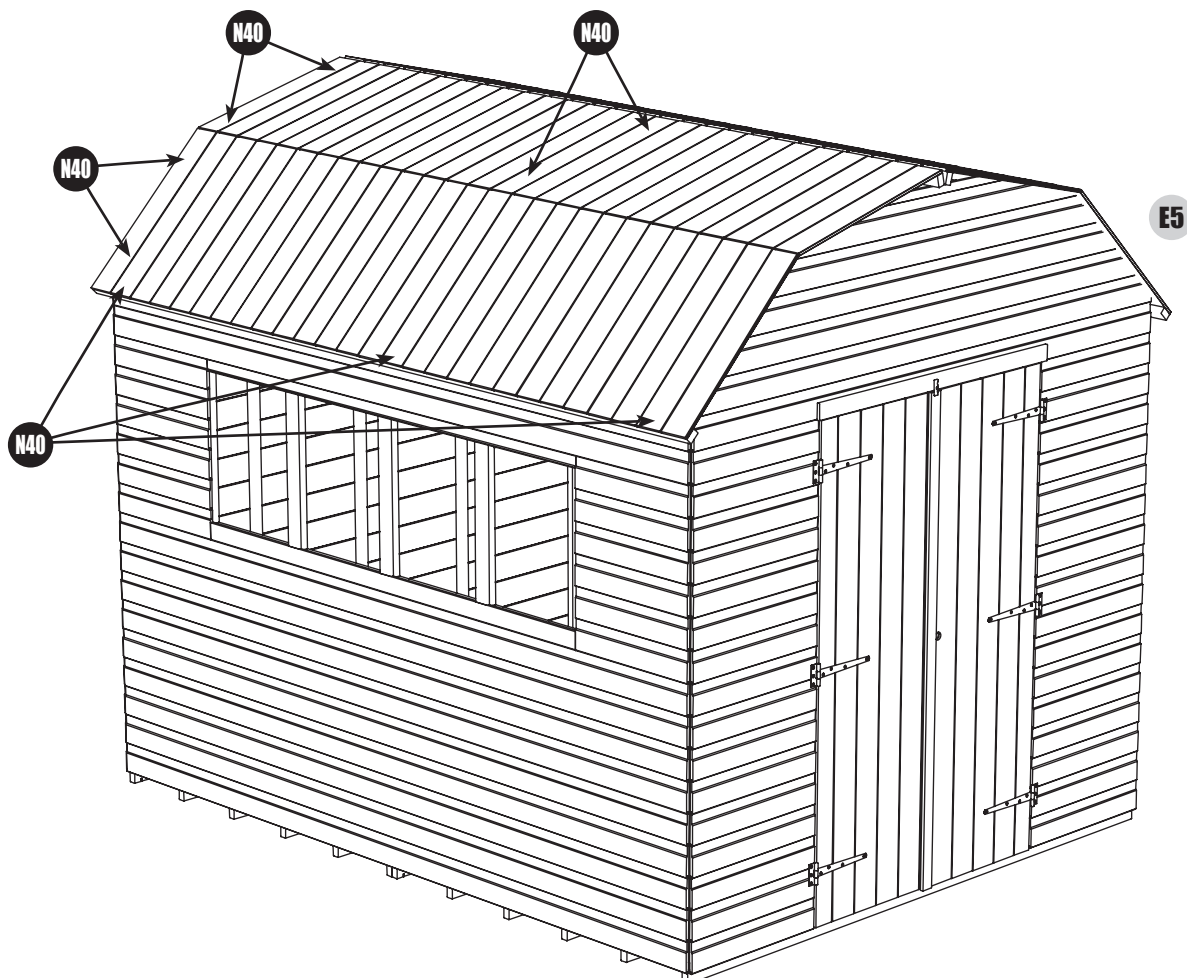

Step 6:

FELTING THE ROOF - MEASURE AND CUT BEFORE FITTING

- Roll felt out onto a clean flat surface 30 minutes before you need it so it has a chance to flatten out.
- Measure length of roof and allow 35mm overhang at each end. Cut each strip of felt to size.
Use a straight edge to guide cutting.
- Roll cut felt piece along low side of roof, Section 1, leaving sufficient overhang to fold down onto roof edge.
- Do not fold underneath roof. **(Detail F1 & F2)**
- Once felt is rolled out, fix felt to roof boards using CN13 at each end, making sure the felt is straight. Fix to roof skirting at approx. 100mm intervals. **(Detail F3)**
- Ensure the felt is tight, then secure the top side of felt using CN13 at approx. 100mm intervals.
- Repeat for remaining felt, working from the low side of roof to the high side, overlapping the felt by 75mm until the roof is fully covered.
- Fold the overhanging felt at ends under roof panel and tack in place.
- Secure 4x boomerang supports. Secure to gable panels using 4x N65 per boomerang underneath where the roof overhangs. These will provide support for the bargeboards. **(Detail F4)**

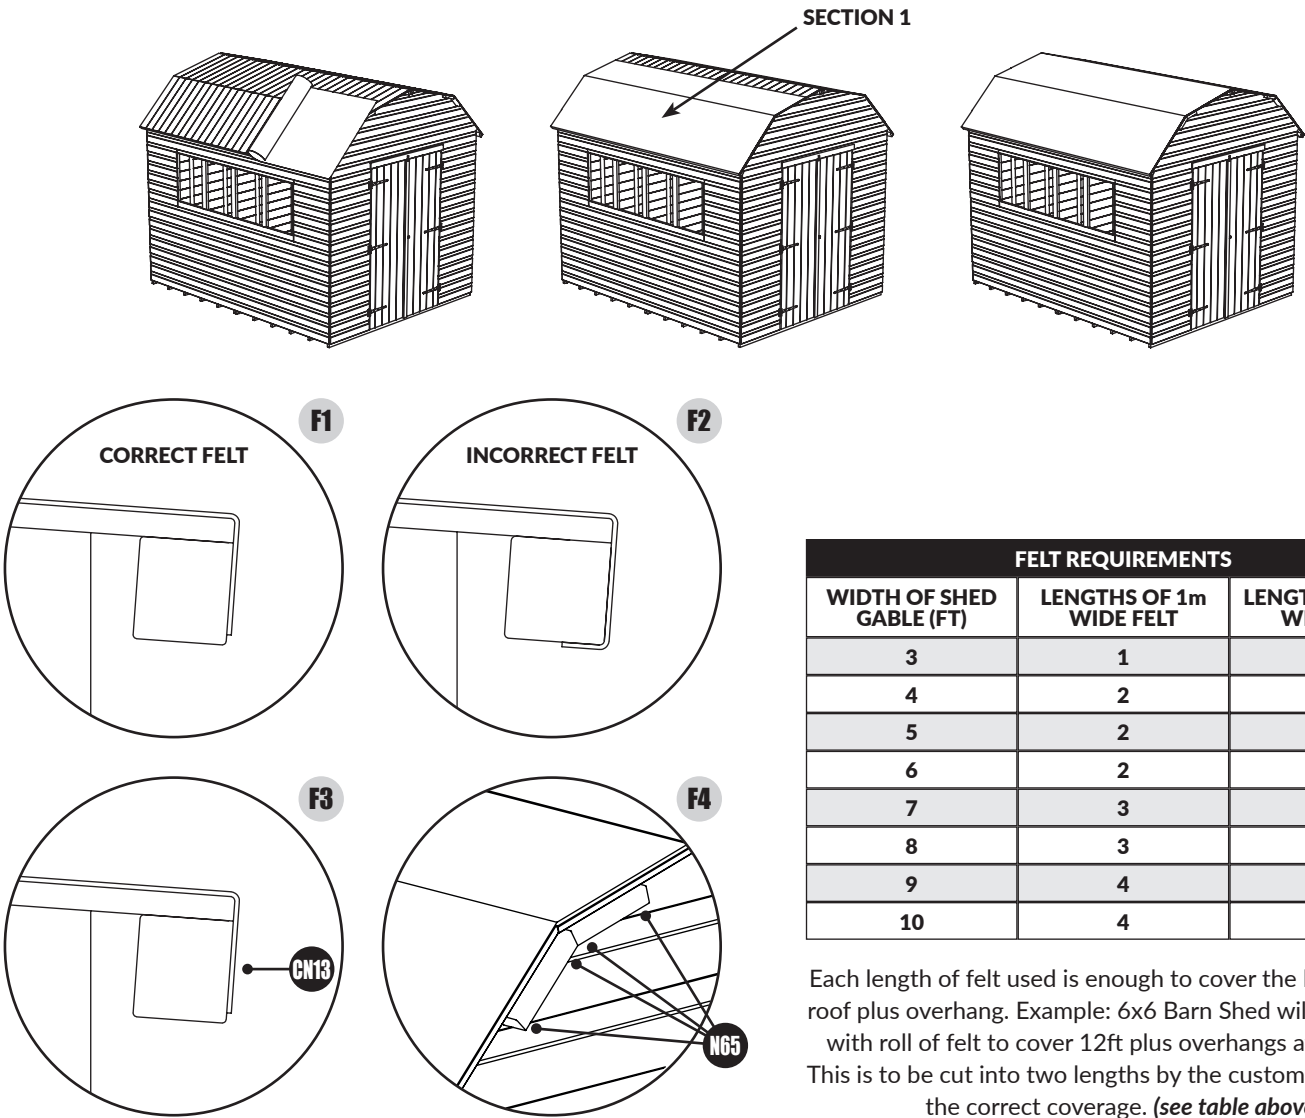


Each length of felt used is enough to cover the length of the roof plus overhang. Example: 6x6 Barn Shed will be supplied with roll of felt to cover 12ft plus overhangs at each end. This is to be cut into two lengths by the customer to provide the correct coverage. (see table above)

TIGER BARN SHED - GENERAL ASSEMBLY INSTRUCTIONS

Step 7:

FITTING FASCIA BOARDS (BARGEBOARDS) & FINIAL




- Fit bargeboards to the roof panels, trapping overhanging end of the felt in between the roof panel and bargeboard. Secure inner bargeboards using 2x N40 per bargeboard through apex purlin and boomerang.
- Secure outer bargeboards using 2x N40 per bargeboard through low side purlin and boomerang.
NOTE: THERE ARE NO BARGEBOARDS SUPPLIED FOR LOW SIDE OF ROOF AS THIS WILL PREVENT EFFECTIVE WATER DRAINAGE.
- Secure finial over the top of the bargeboards using 2x N40 per finial. (Optional)

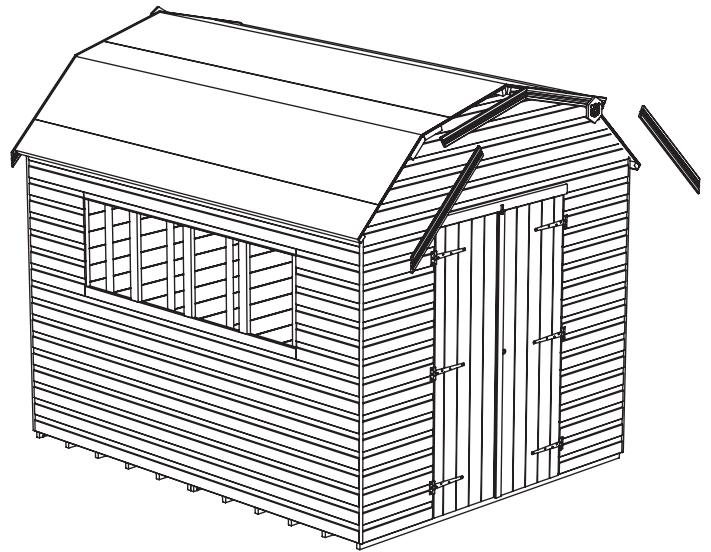

Step 8:

FIT CORNER STRIPS AND COVER STRIPS - CERTAIN SIZES ONLY

- Secure the corner strips at each corner of the shed with 4x N40 per corner strip.
NOTE: THESE CORNER STRIPS MAY NEED CUTTING TO SIZE.
NOTE: NOT TO BE CONFUSED WITH WINDOW BEADING.
- On sheds with a join in the side panels, use cover strip to hide join. Secure to sides using 4x N40 per cover strip. *(Detail G)*
NOTE: THESE COVER STRIPS MAY NEED CUTTING TO SIZE.
NOTE: NOT TO BE CONFUSED WITH BARGEBOARD.

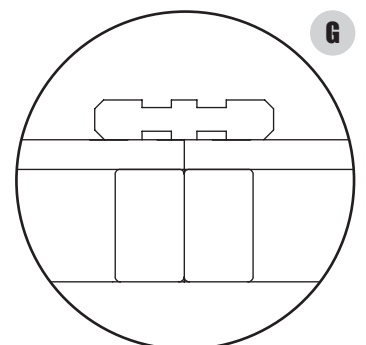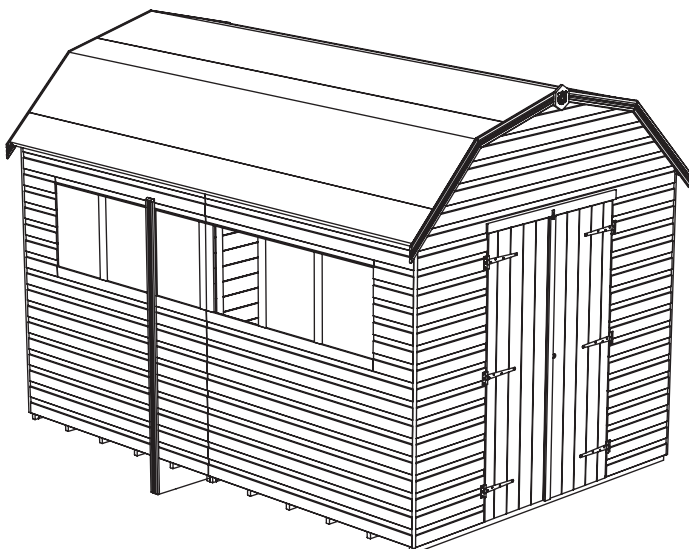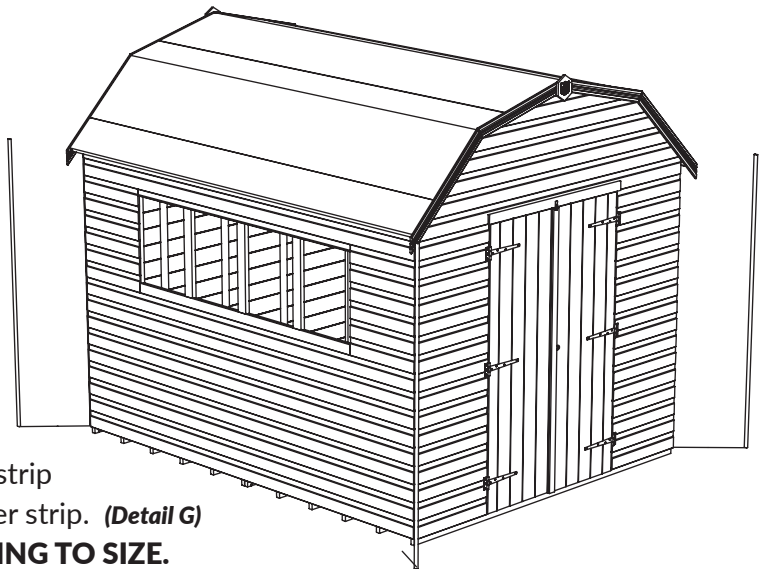

Step 9:

INSTALLING GLAZING

- Glaze windows by securing glass/styrene with PP25 supplied, from the inside. *(Detail H)*

NOTE: ALL WINDOWS MUST BE SEALED INSIDE AND OUT WITH SILICONE, PUTTY, OR ANY OTHER WATER-TIGHT SOLUTION. (NOT SUPPLIED).

NOTE: PLEASE DO NOT CONFUSE YOUR CORNER STRIPS WITH WINDOW BEADING. WE DO NOT SUPPLY WINDOW BEADING AS STANDARD WITH OUR BUILDINGS UNLESS ORDERED.




- Contact our friendly customer support team to order a standard window glazing kit, complete with beading and sealant.



Step 10:

INSTALLING DOOR PULL

- Find comfortable height for supplied door pull handle.
- Secure handle to door using 4x 25mm (BS25) screws in the holes provided.
 - If door is made from interlocking boards and your chosen handle position does not match with existing door bracing, use supplied 150mm framing to fix handle screws into.
 - If chosen position matches existing bracing, secure directly into this.
 - For summerhouse doors, secure directly into the door frame.

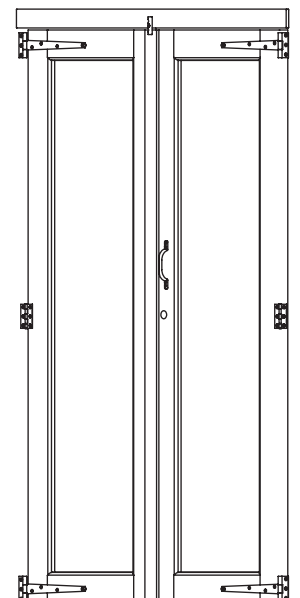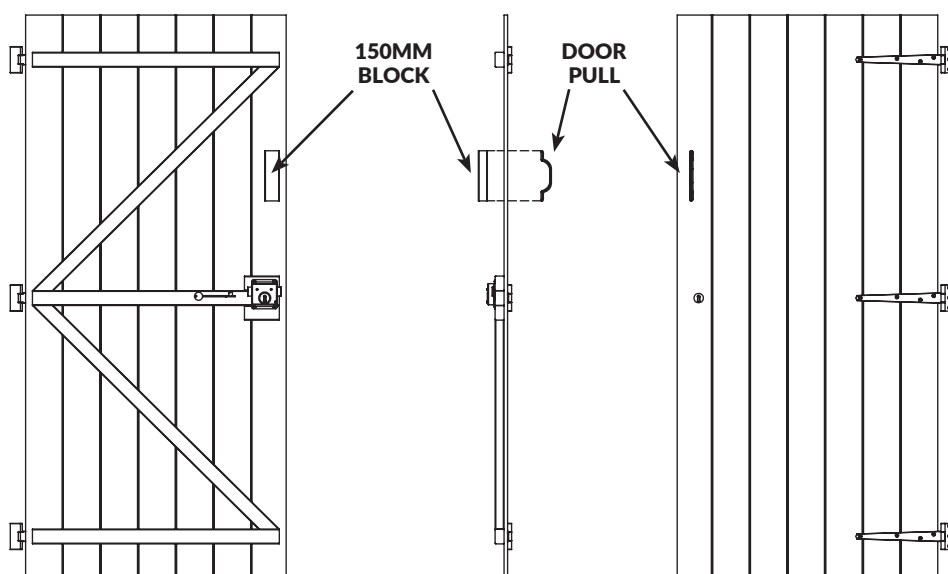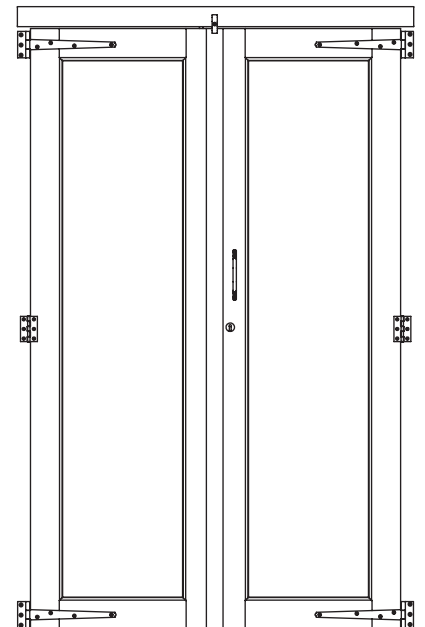

TIG/INS57



Head Office

Calverley Lane,
Rodley,
Leeds,
West Yorkshire,
LS13 1NP

Telephone: 0113 205 4189

Website: tigersheds.com

Email: customersupport@tigersheds.com



SCAN CODE!

**TO VIEW GENERAL ASSEMBLY GUIDE
FOR BARN ROOF SHED/SUMMERHOUSE**



SCAN CODE!

**TO SEE GENERAL ACCESSORY &
INSTALLATION VIDEO LIBRARY**

